

INITIALISING FSW-T160B

Step 1: Push and hold the control button “down” until the movement of the column stops.


Step 2: Release the “down” button.

Step 3: Push and hold the control button “down” again in between 10 seconds after step 2.


The column moves 3 mm down and up.

Step 4: Release the “down” button.

The column is initialized now and ready to use.

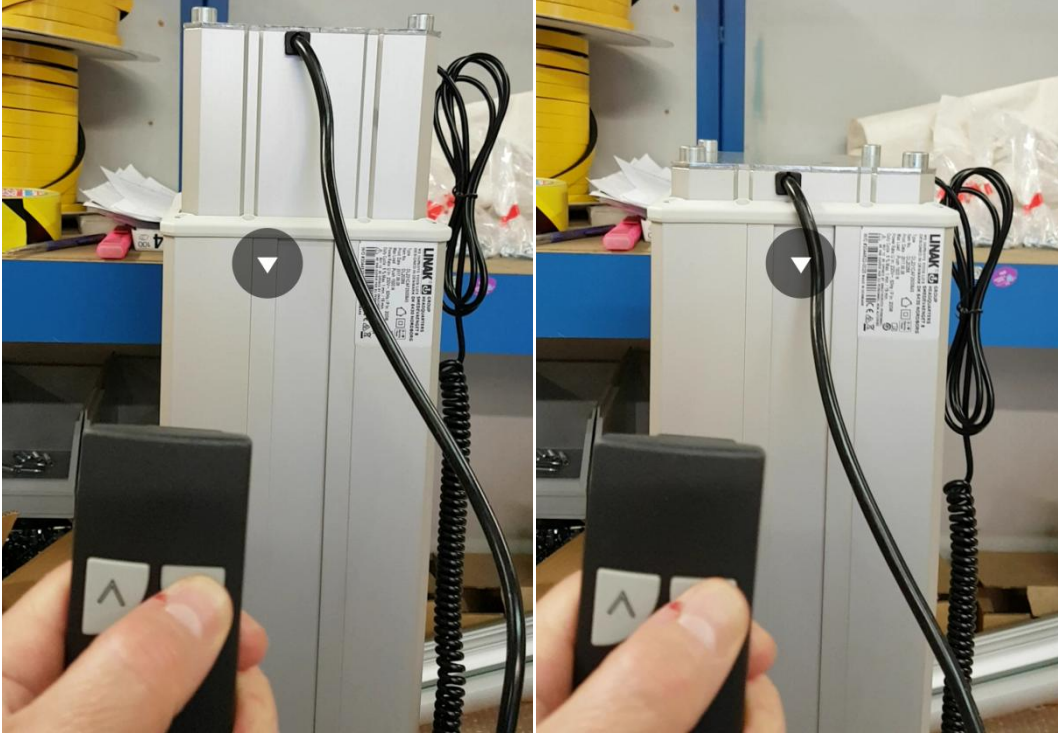

Step 1

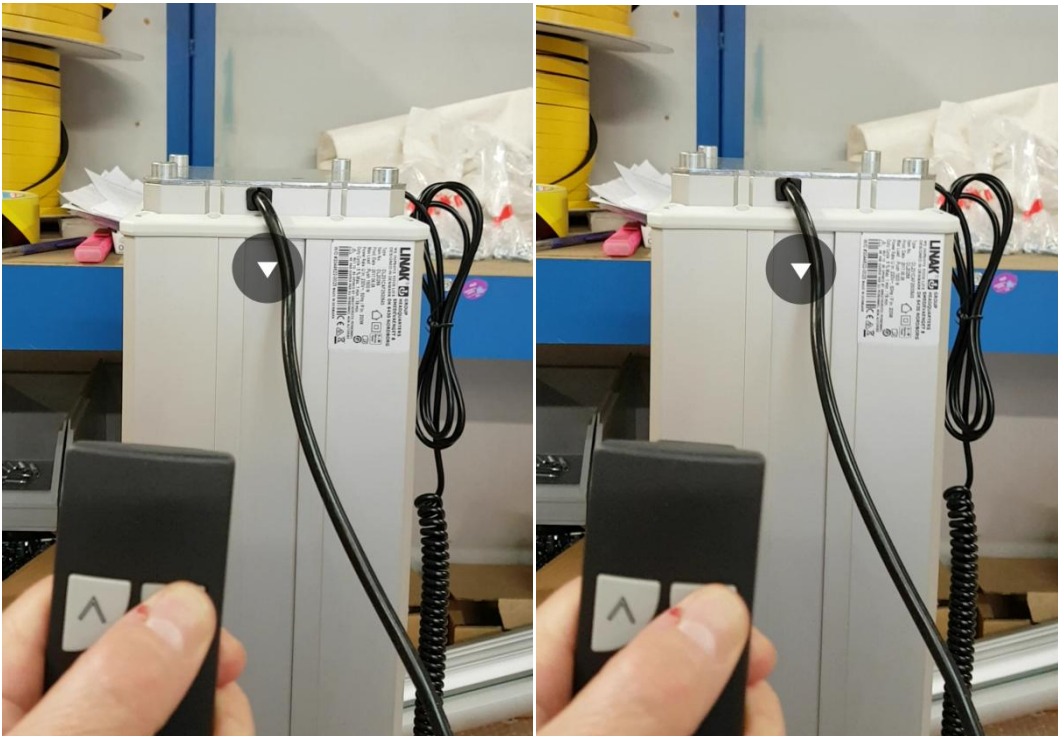

Step 3