


# Flat panel Wall Mount-V8SV

## Installation manual Montage handleiding

FWM-V8SV

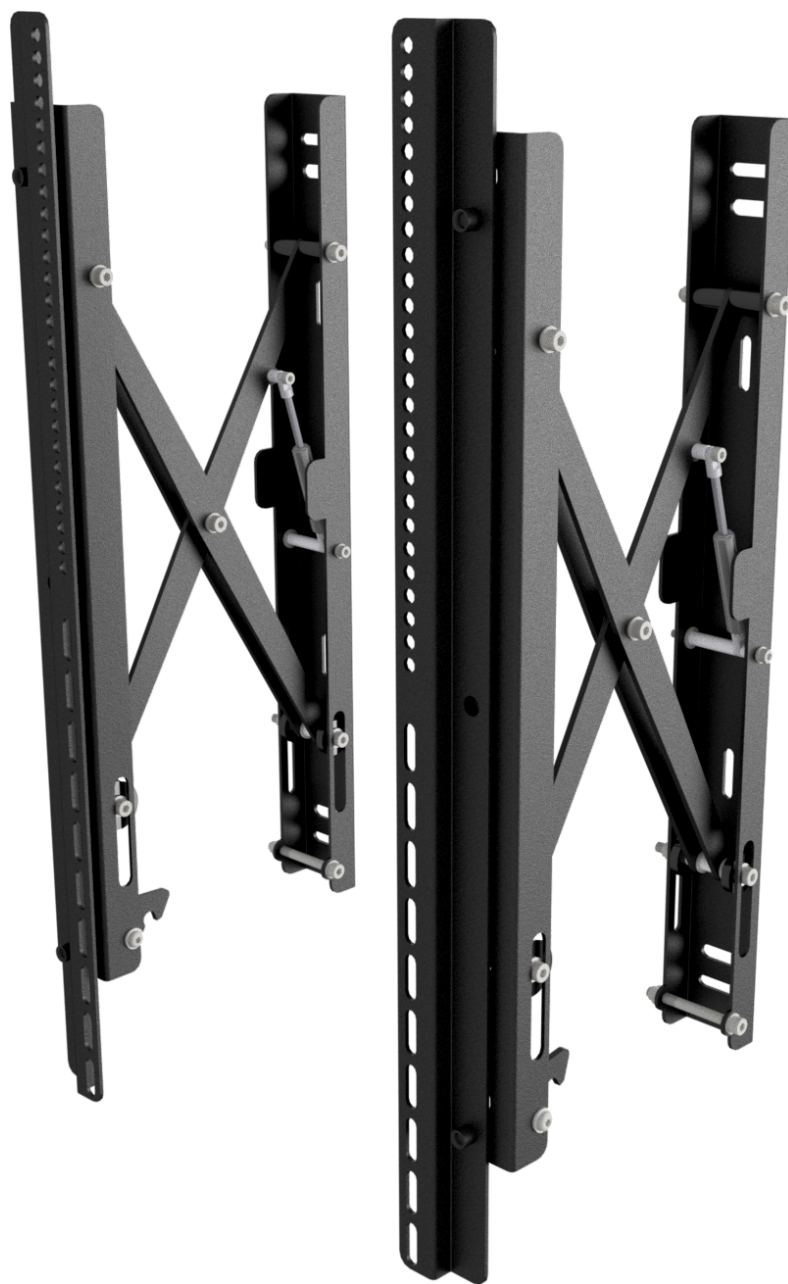

**EN.**

1: Mount the FWM (A) to the wall and align the heart to the right VESA dimension, plus 76mm of extra space.

2: Mount the brackets (C) on the flatscreen

3: Hook the flatscreen with the brackets into the FWM (C into B)

4: Pull the cord to unlock and release. (D)

**NL.**

1: Bevestig de FWM (A) aan de muur en bevestig het hart van de FWM op de juiste VESA afmeting, plus 76 mm extra ruimte.

2: Bevestig de brackets aan de flatscreen (C)

3: Haak de flatscreen met de brackets in de FWM (C in B)

4: Gebruik het koord om te ontgrendelen. (D)

